



Hirsch Velocity Software

Intrusion Detection System (IDS) with DMP Integration



In the Hirsch Velocity Software Intrusion Detection System (IDS) Integration with DMP's XR Series, our security platform combines access control and video management all in a single pane.

Robust Intrusion Detection Solution

Velocity now allows control of the intrusion system's arming status by area or for the entire installation. The system also allows for unique points or zones to be bypassed or unbypassed.

Velocity incorporates the system labels that are programmed into the intrusion system to allow for quick identification of unique points/zones, areas, or outputs. These labels are visible in the Velocity Event Viewer whenever the status of that specific component of the intrusion system changes.

Full System Control in Intuitive Platform

Every Velocity system includes Graphics, allowing you to create and manage

your access control, video, and intrusion systems in one intuitive, easy-to-use map. Simply upload facility floor

plans to build custom maps with easy-to-create areas and drag-and-drop icons that match your system's hardware.

Integrated Solution, Single Trusted Provider

Hirsch's framework solution allows for Hirsch Velocity to integrate with intrusion systems. Paired with existing video management systems, Velocity provides a complete control platform to protect facilities and give you full security control over your entire operation.

Best-In-Class

Combines access control and intrusion detection with the DMP XR Series intrusion alarm systems, all in a single pane

Full Feature Set

Arming and disarming commands, control over areas and entire system, bypass individual points/zones

Intrusion Integration

Trigger intrusion system outputs on/off, silence alarm bells, integrated intrusion system labels and names

Intuitive Platform

Create and manage your access control, video, and intrusion systems in one intuitive, easy-to-use map



Core Features

DMP Panels Supported	XR550, XR150
Hirsch Velocity Supported	3.8 or later (including all service packs)
Add/Manage IDS from Velocity	Using the Velocity interface configuration, add, edit, or delete the IDS Framework
Connect to DMP XR Series Panels	Connect to panels via IP network and Velocity control interface to provide synchronized control and time/date reporting
Arm/Disarm Panels or Areas	The IDS Framework gives authorized users the ability to arm/disarm areas or an entire intrusion system — arming levels include: Disarm, All On Instant, All On Delay, Part On Instant, Part On Delay, Force All On Instant, Force All On Delay, Force Part On Instant, Force Part On Delay
Bypass/Reset Points or Zones	Select and bypass or reset specific points/zones in the intrusion system
Trigger Programmed Outputs	Select and turn on/off programmed outputs tied to the intrusion system
Silence Alarm Bells	Silence alarm bells in the case of unwanted alarm activity
View System Status	View arming levels and system status on the Velocity control interface
Create Customizable Graphical System Maps	Import floor plans to overlay custom areas and place points/zones and outputs to match specific installations Customize graphics to color code status-specific alarm perimeters and interiors

Part Numbers

Part Number	Description
VEL-IDS-DMP-PLUGIN	Velocity integration for DMP Intrusion Detection System plug-in license. First year SSA (Software Support Agreement) required, not included.
SSA-VEL-IDS-DMP-PLUGIN	Velocity integration for DMP Intrusion Detection System Software Support Agreement - 1 Year

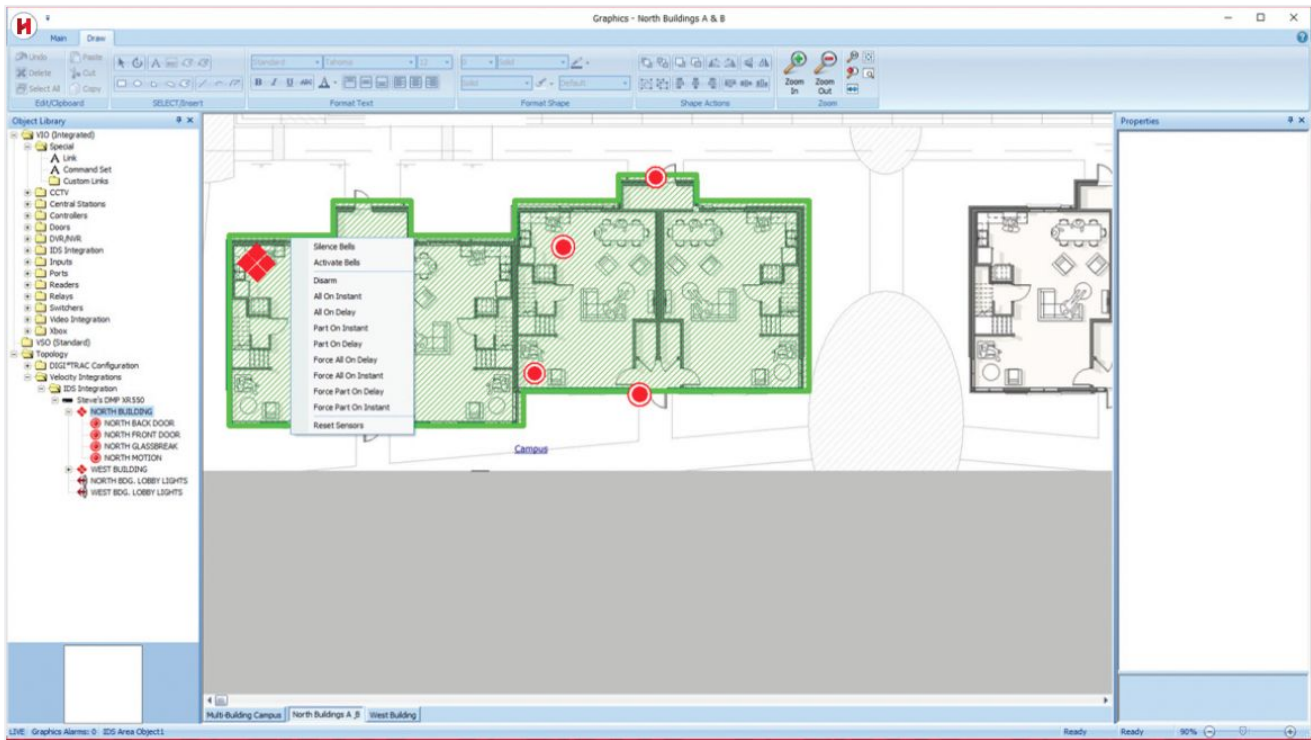 


Figure 1: Arming Intrusion Area from Velocity Graphics Window

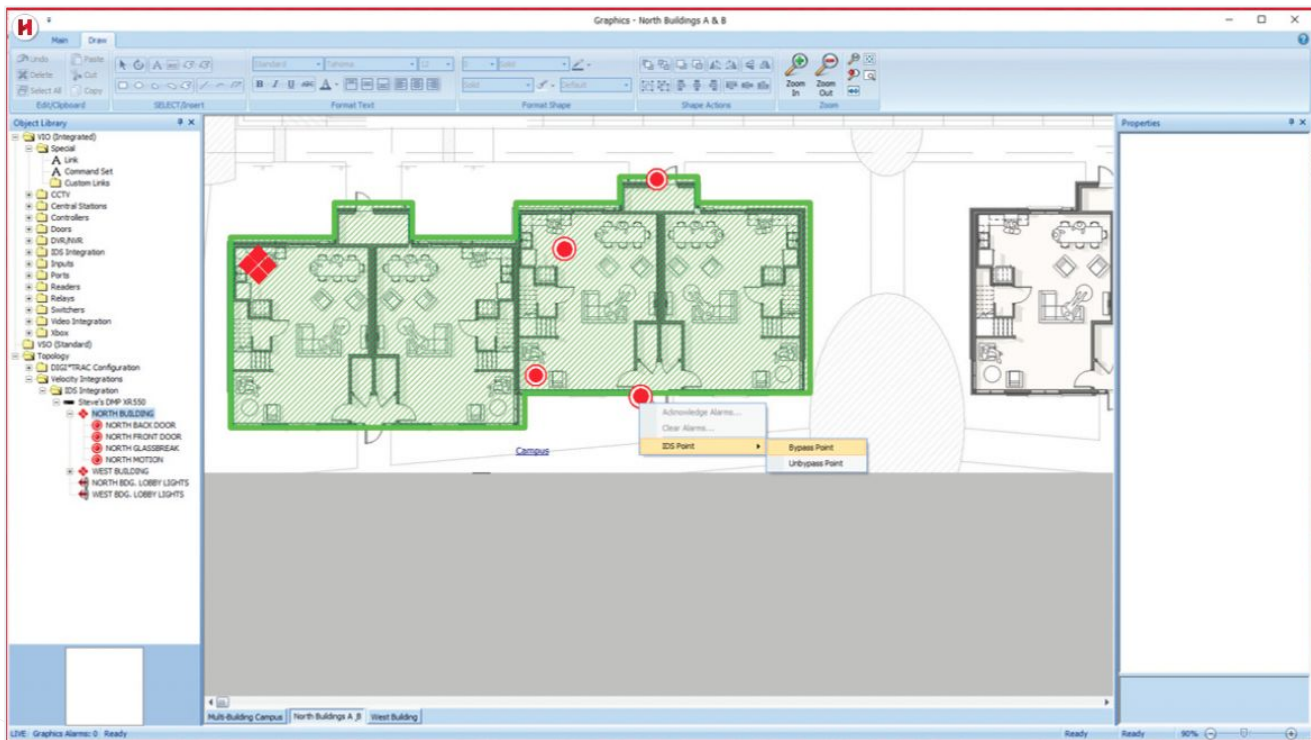 


Figure 2: Bypassing a Point from Velocity Graphics Window

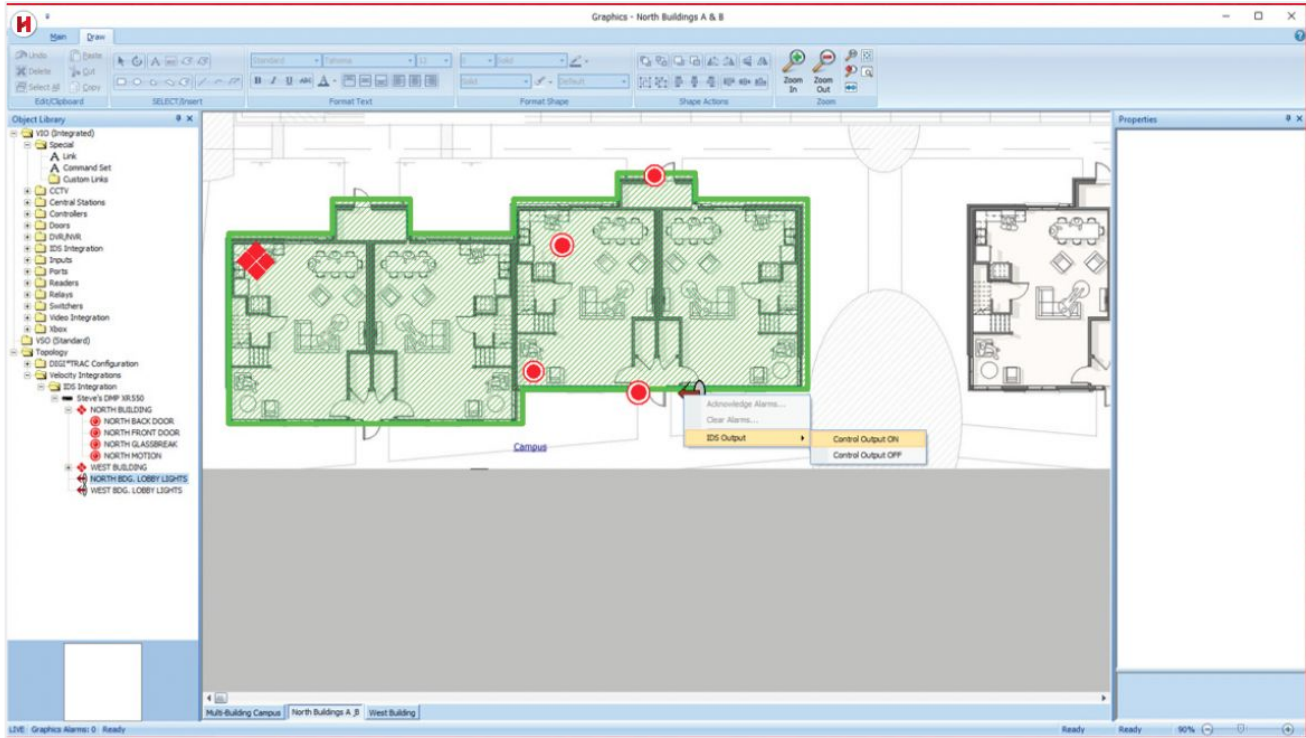 


Figure 3: Triggering an Output from Velocity Graphics Window

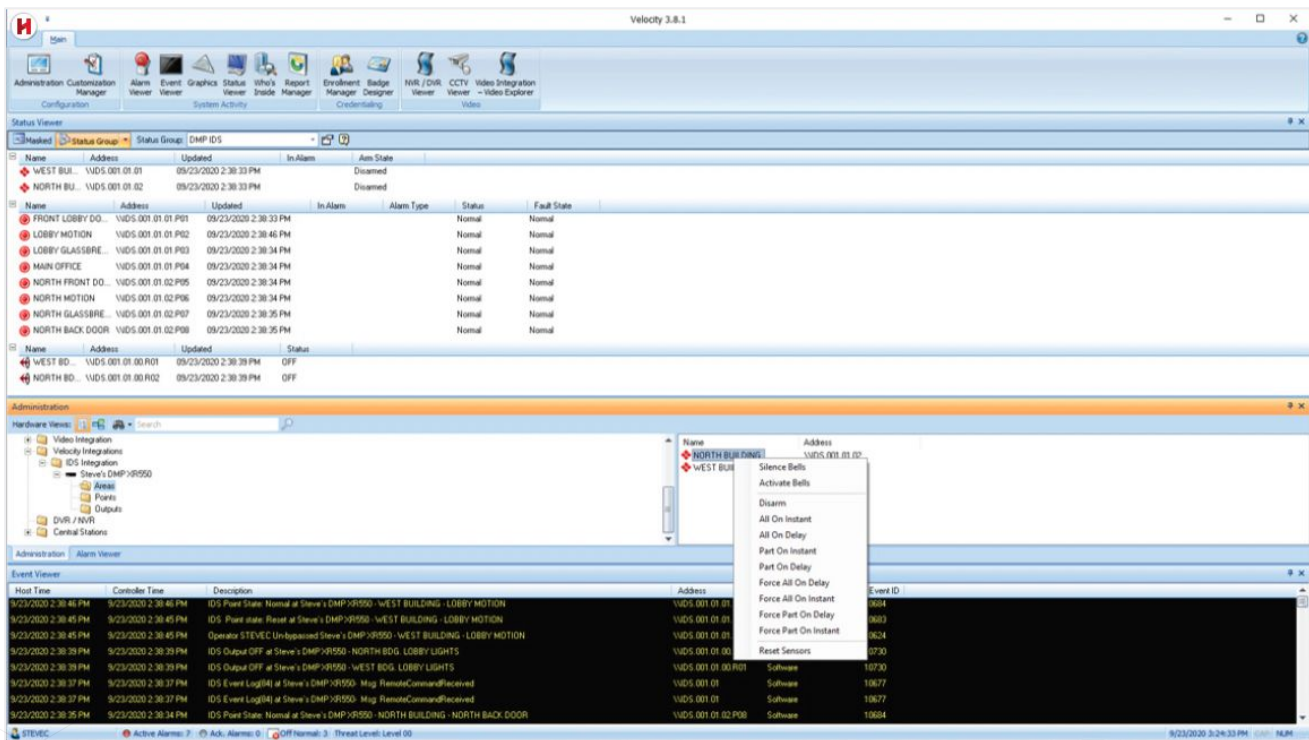 


Figure 4: Arming Intrusion Area from Velocity Administration Window

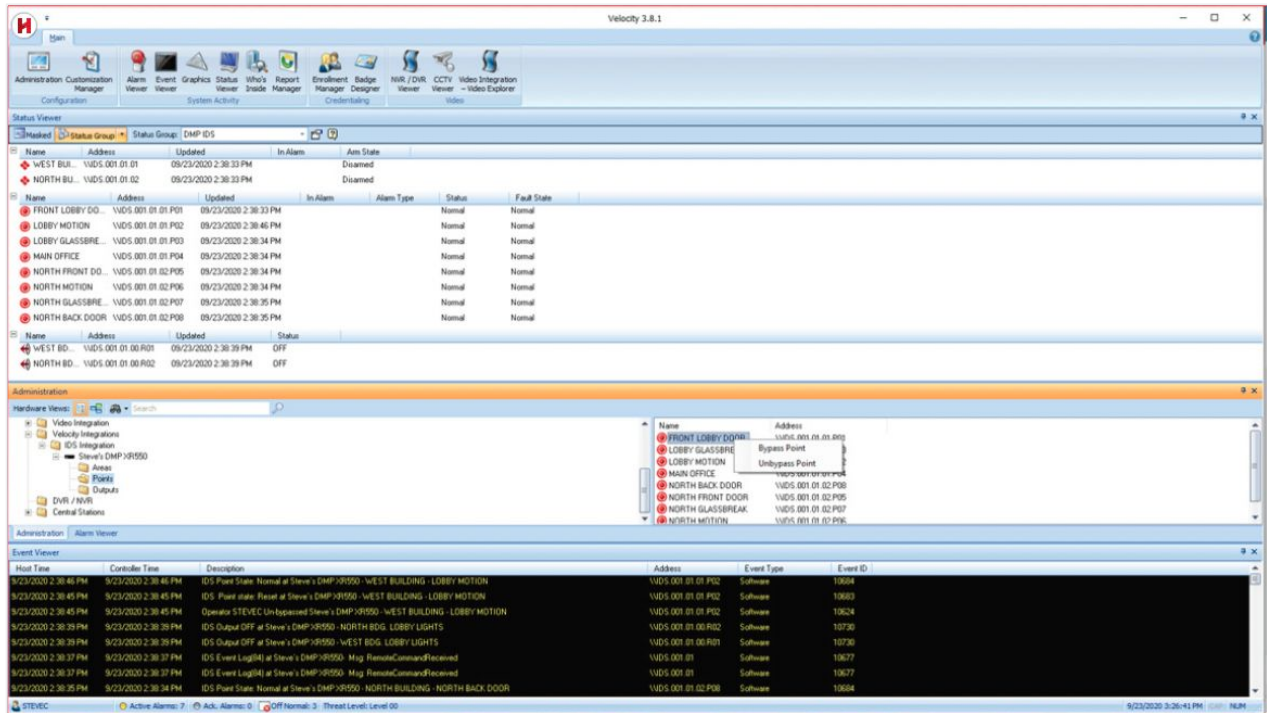 


Figure 5: Bypassing a Point from Velocity Administration Window

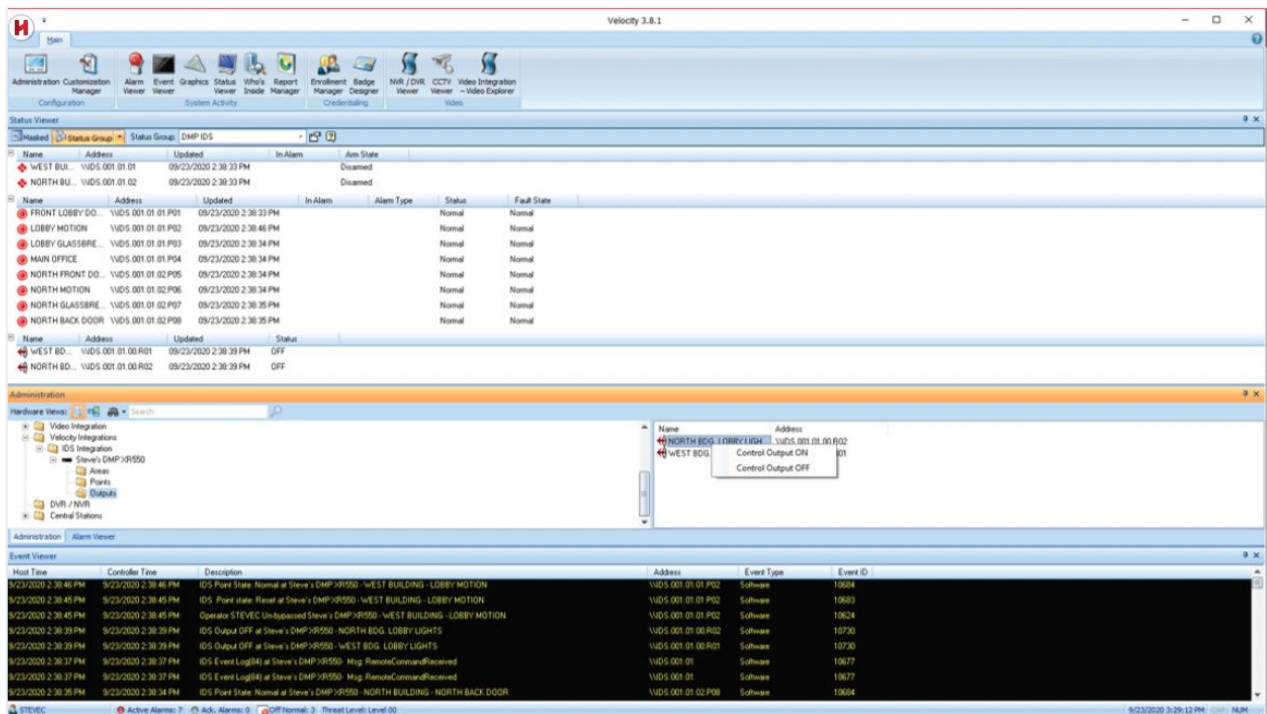 


Figure 6: Triggering an Output from Velocity